


Mico Mic Installation Instructions

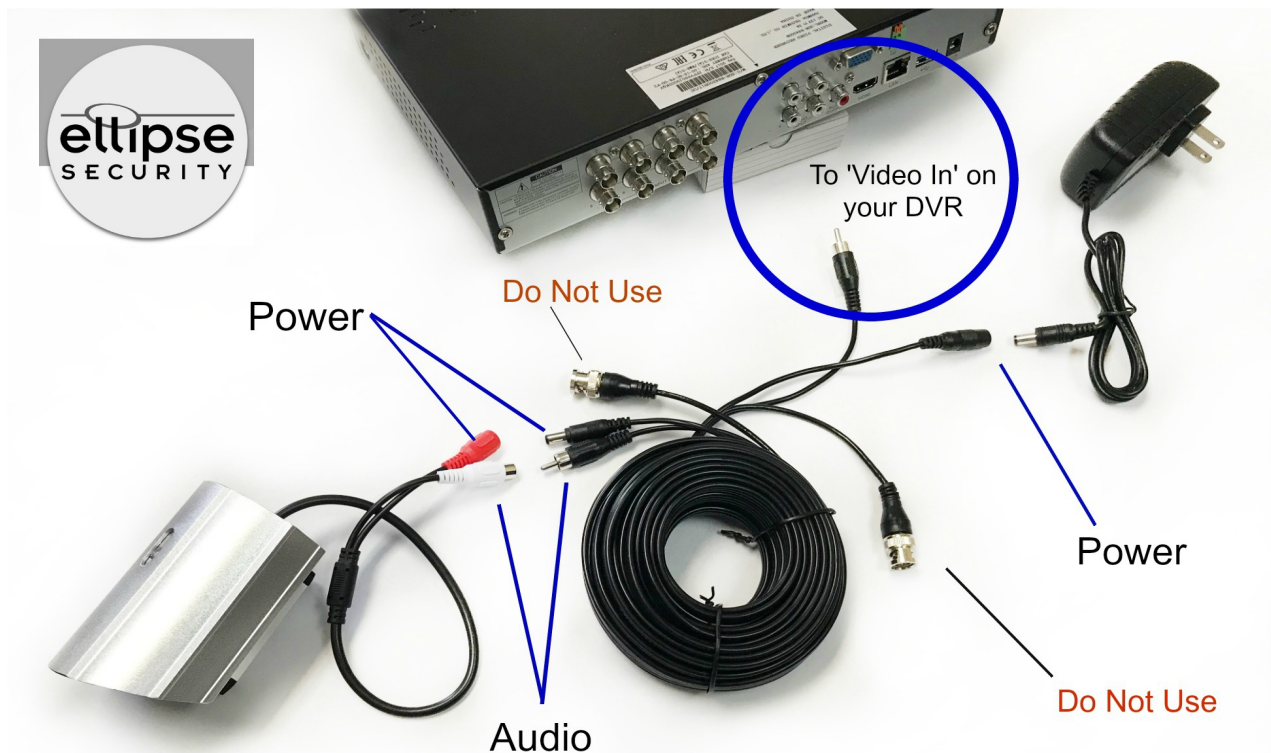

1. Plug Red Power from Mic into Male Power on Cable
2. Plug White Audio Plug from Mic into Male Audio on Cable
3. Plug Female Power on DVR Side of Cable into Power Adapter
4. Plug Power Adapter into Power Source
5. Plug Male Audio on Cable into 'Audio Input' of DVR
6. BNC Plugs on both ends will not be used in this application

Free Technical Assistance Call 877-880-7728

* If Audio is plugged into (Audio In) channel 1, you must pull up Channel 1 full screen to hear live audio. Your monitor, or TV, must have Audio, or Speakers in order to do this. If your monitor does not have built in speakers, you must purchase a DVR Speaker Kit or hook up speakers to your DVR.

* If using VGA output to Monitor, you must run a cable from 'audio out' to 'audio in' on your monitor. If using HDMI, audio will be transmitted through your HDMI cable. Your monitor must still have built in speakers.

* Do not run audio cables next to high voltage electrical lines or install microphones near noisy appliances as both will cause interference.